


# GRAIN MOISTURE METER (Model : GMK-303RS)

## 1. The names of each part

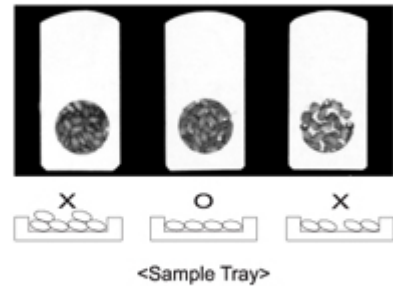

## 2. Before Measurement

- Open the lid in the bottom of the Instrument and place 1.5V batteries 4EA into battery compartment.
- [S 303] sign displays on LCD for 2~3 sec. and then disappears.

## 3. Measurement

- Fill Sample Tray with a Sample by using Spoon (with Tweezers).
- Put Sample Tray into the instrument.
- After turning Grinding Handle right to the end, choose the same Grain Select Button as a Sample.
- Press Measure Button, and then the number of times & moisture content display on LCD.

### [ Notice ]

- The Instrument turns off automatically around 1 min. later when there is no other operation.
- When [ ] displays, please change batteries.
- When the moisture content in a Sample is out of Measuring Ranges, [Er H] or [Er L] displays.

## 4. Average Data

- Average data (up to 9 times) is available by pressing Average Button.

### [ Notice ]

- When you want to get average data, please press Average Button before measurement to erase the previous data.
- The instrument turns off automatically when pressing Average Button two times continuously.

## 5. Keeping

- Keep the Instrument in a cool place.
- Clean the Instrument after measurement.

## 6. Battery



In case of no use for a while, please remove batteries.

## 7. Warranty

- The manufacturer grants a total replacement of warranty of 12 months from the date of purchase.
- In case of wrong use, abuse or misuse, warranty is not granted.

### ACCESSORIES



Sample Tray



Spoon with Tweezers



Brush



Carrying Case

