


# GRAIN MOISTURE METER (MODEL : GMK-303F)

## 1. The names of each part

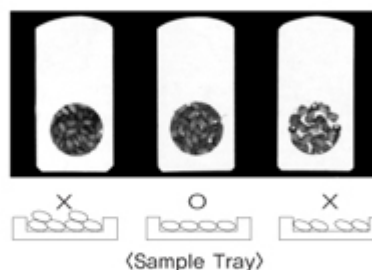

## 2. Before Measurement

- Open the lid in the bottom of the Instrument and place 1.5V batteries 4EA into battery compartment.
- [F 303] sign displays on LCD for 2~3 sec. and then disappears.

## 3. Measurement

- Fill Sample Tray with a Sample by using Spoon (with Tweezers).
  - Put Sample Tray into the instrument.
  - After turning Grinding Handle right to the end, choose the same Grain Select Button as a Sample.
  - Press Measure Button, and then the number of times & moisture content display on LCD.
- [Notice]
- The Instrument turns off automatically around 1 min. later when there is no other operation.
  - When [ ] displays, please change batteries.
  - When the moisture content in a Sample is out of measuring Ranges, [Er H] or [Er L] sign displays.

## 4. Average Data

- Average data (up to 9 times) is available by pressing Average Button.
- [Notice]
- Please press Average button before measurement to erase the previous data.
  - The power is off automatically when pressing Average Button two times.

## 5. Keeping

- Keep the Instrument in a cool place.
- Clean the Instrument after measurement.

## 6 Battery



In case of no use for a while, please remove batteries.

## 7. Warranty

- The manufacturer grants a total replacement of warranty of 12 months from the date of purchase.
- In case of wrong use, abuse or misuse, warranty is not granted.

### ACCESSORIES



Sample Tray



Spoon with Tweezers



Brush

### <OPTION>



Hand Grinder for Large Samples  
(1<sup>st</sup> Grinding before measurement)

