


# NEW SEED MOISTURE METER (GMK-503S)

## 1. Description of the Instrument

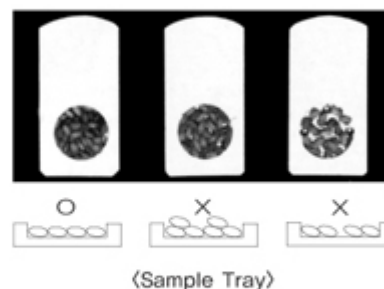

## 2. Before Measurement

- Place 1.5V batteries 4EA into battery compartment (Back side).
- If [ s 503 ] sign displays on LCD and then disappears, the instrument is ready to measure (in normal condition).

## 3. Measurement

- Fill Sample Tray with some test samples by using Spoon (with Tweezers).
- Put Sample Tray into the instrument.
- After turning Grinding Handle right to the end, choose the same Seed Select Button as a Sample.
- Press Measure Button, and moisture content appears on LCD for about 1 min..

### [ Notice ]

- The Instrument turns off automatically around 2 min. later when there is no other operation.
- When [ ] displays, please change batteries shortly.
- When the moisture content is out of measuring ranges, [Er H] or [Er L] sign appears.

## 4. Average Data

- Average data (up to 9 times) is available by pressing Average Button.

### [ Notice ]

- Please press Average Button before measurement to erase the previous data.
- The Power is off when pressing Average Button two times continuously.

## 5. Keeping

- Keep the Instrument in a cool place.
- Clean the Instrument after measurement.

## 6. Battery



In case of no use for a while, please remove batteries.

## 7. Warranty

- The manufacturer grants a total replacement of warranty of 12 months from the date of purchase.
- In case of wrong use, abuse or misuse, warranty is not granted.

### ACCESSORIES



Sample Tray



Spoon with Tweezers



Brush



Carrying Case

