
NEW WOOD MOISTURE METER (Model : GMK-1010NS)

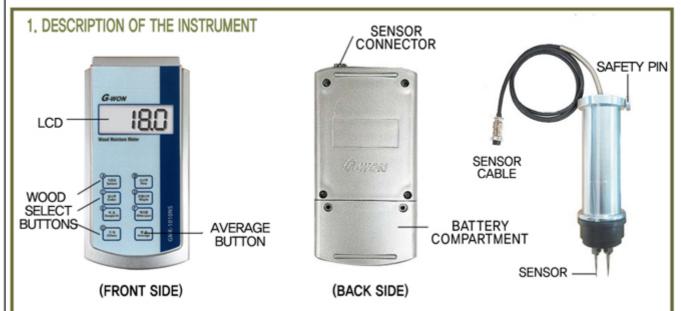

2. BEFORE MEASUREMENT

- CONNECT SENSOR CABLE WITH THE INSTRUMENT.
- OPEN THE LID OF BATTERY COMPARTMENT (BACK SIDE) AND PLACE 9V BATTERY 1EA IN IT.
- 'F10' SIGN APPEARS ON LCD AND DISAPPEARS. THE INSTRUMENT IS READY TO MEASURE IN NORMAL CONDITION (AUTO CALIBRATION).

MEASUREMENT

- PREPARE FOR THE TEST SAMPLE AND PLACE AN INSTRUMENT AT THE SAME PLACE FOR ABOUT 10 MINUTES.
- TURN LEFT 'SAFETY PIN' OF THE SENSOR AND INSERT SENSOR INTO TEST SAMPLE STRAIGHTLY.
- PRESS ONE WOOD SELECT BUTTON (AMONG @SPRUCE, @PINE, @CEDAR, @MAPLE, @DOUGLAS FIR. WHITE LAUAN, GOTHERS), AND THE MEASUREMENT RESULT APPEARS FOR ABOUT ONE MINUTE. (# WHEN THE MOISTURE % OF THE TEST SAMPLE IS BELOW 9%, "ErL' SIGN APPEARS AND IN CASE OF OVER 50%, "ErH" SIGN APPEARS.)
- PRESS 'AVERAGE' BUTTON, AND YOU CAN GET THE AVERAGE DATA (UP TO 9 TIMES).
- PRESS 'AVERAGE' BUTTON ONE MORE TIME. THE POWER IS OFF.
- WHEN THERE IS NO OTHER OPERATION. THE POWER IS OFF AFTER 3 MINUTES (AUTO HOLD & AUTO OFF FUNCTION).

4. IMPORTANT

- · AFTER TEST, TAKE OUT THE SENSOR FROM THE TEST SAMPLE AND TURN RIGHT 'SAFETY PIN'.
- DO NOT STORE THE INSTRUMENT AT DAMP PLACE.
- IN CASE OF NO USE FOR A LONG TIME, MAKE SURE TO REMOVE THE BATTERY.
- THE MANUFACTURER GRANTS A TOTAL REPLACEMENT WARRANTY OF 12 MONTHS AFTER THE DATE OF PURCHASE.
- IN CASE OF WRONG USE, ABUSE OR MISUSE, WARRANTY WILL NOT AVAILABLE.

G-WON HITECH CO., LTD.

WOOLIM E-BIZ. CENTER 310, #170-5, GURO-DONG, GURO-GU, SEOUL, KOREA(152-769) Tel: 82-2-2108-1646(DIR.)

Fax: 82-2-2108-1650

E-MAIL; g-won@g-won.co.kr

Other Instruments

- Grain Moisture Meter
- Coffee Moisture Meter
- Tobacco Moisture Meter Digital Refractometer
- Flour Moisture Meter
- Digital Salt Meter
- Seed Moisture Meter
- Fruit Acidity Meter

BACK



