

CONVERTIDOR 2 – 3 GHZ

2 – 3 GHZ DOWN CONVERTER

CV-223

- 0 MI1527 -



MANUAL DE INSTRUCCIONES

CV-223



INTRODUCCIÓN

El **CV-223** es un convertidor de radio frecuencia para la banda de frecuencias entre 2020 y 3000 MHz. Esta banda que tiene 1000 MHz de ancho es convertida a un margen de frecuencias de 20 a 1000 MHz para poder ser visualizada y medida utilizando un analizador de espectros.


Es un dispositivo activo y debe alimentarse desde el analizador de espectros por medio de la fuente de alimentación para LNB.

El convertidor **CV-223** puede utilizarse en combinación con un analizador de espectros PROLINK-2+, PROLINK-3/3C Premium, PROLINK-4/4C Premium, TV EXPLORER **II / II+**, TV EXPLORER **HD / HD LE / HD+** o **HD RANGER+**. Algunas de sus aplicaciones son el alineamiento de enlaces “wireless” punto a punto o medida de radioenlaces de televisión en COFDM.

ESPECIFICACIONES

Margen de frecuencias de entrada	2020 – 3000 MHz
Conector de entrada RF	Tipo N
Margen de frecuencias de salida	20 – 1000 MHz
Conector de salida IF	Tipo N
Frecuencia del oscilador local	2000 MHz
Ganancia	30 dB typ
Tensión de alimentación	+9..., 15 V DC vía el conector de salida IF.
Consumo de corriente	260 mA
Dimensiones	82 x 64 x 22 mm
Peso	222 grs.
Accesorios incluidos	1 x cable coaxial BNC / BNC (CC-024). 2 x adap. "N" M / "BNC" H (AD-059)

UTILIZANDO EL CONVERTIDOR

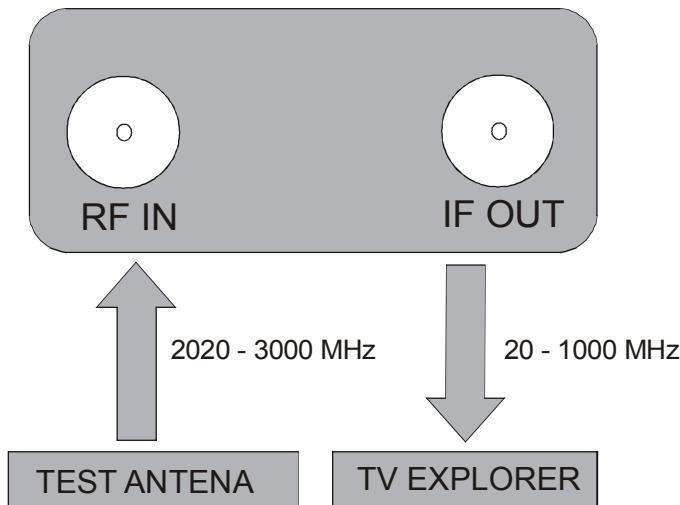

En primer lugar es necesario conectar la salida de IF del convertidor al analizador de espectros utilizando el cable coaxial y los adaptadores que se suministran. La fuente de señal o la antena de pruebas deben conectarse a la entrada de RF para finalmente alimentar desde el analizador de espectros. Si el **CV-223** se utiliza con un medidor de campo PROLINK-2+, PROLINK-3/3C Premium, PROLINK-4/4C Premium, TV EXPLORER II / II+, TV EXPLORER HD / HD LE / HD+ o HD RANGER+. la indicación de "Drain" sobre el analizador de espectros confirmará que el convertidor está activo.

En la pantalla del analizador visualizaremos siempre un margen de frecuencias que en realidad estará 1000 MHz por encima de la frecuencia sintonizada.

USER'S MANUAL

CV-223



INTRODUCTION

The **CV-223** is a radio frequency down converter for the 2020 to 3000 MHz frequency range. This band which is 1000 MHz wide is down converted to the frequency range from 20 to 1000 MHz so that it can be viewed and measured using a spectrum analyser.


It is an active device and it must be supplied from the spectrum analyser via the LNB power supply.

The **CV-223** down converter can be used together with PROLINK-2+, PROLINK-3/3C *Premium*, PROLINK-4/4C *Premium*, TV EXPLORER **//** / **//+**, TV EXPLORER **HD** / **HD LE** / **HD+** or **HD RANGER** / + spectrum analysers. Possible applications cover wireless point to point link alignment or measurement of TV COFDM radio links.

SPECIFICATIONS

RF input Range	2020 – 3000 MHz
RF input connector	N type
RF output Range	20 – 1000 MHz
IF output connector	N type
LO Frequency	2000 MHz
Gain	30 dB typ
Supply voltage	+9...+15 VDC via de IF output connector
Current consumption	260 mA
Dimensions	82 x 64 x 22 mm
Weight	222 g.
Included accessories	1 x BNC / BNC coaxial cable (CC-024). 2 x "N" M / "BNC" F adapter (AD-059)

USING THE DOWN CONVERTER

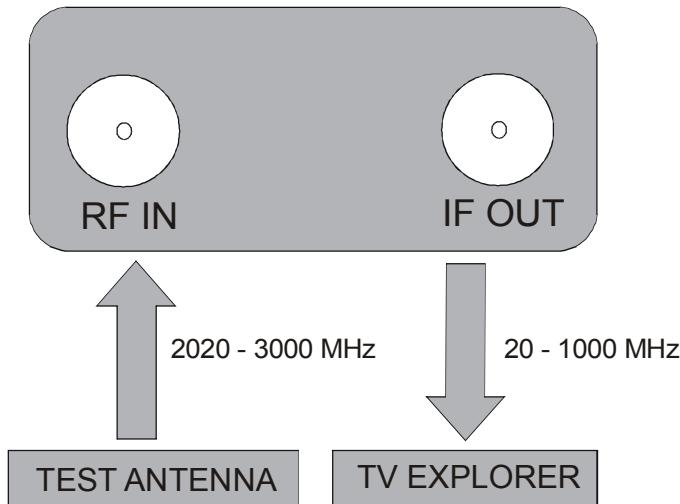

First of all the IF output should be connected to the spectrum analyser input using the supplied coaxial cable and adapters. The signal source or the test antenna should then be connected to the down converter RF input to finally activate the spectrum analyser power supply. If the **CV-223** is used with PROLINK-2+, PROLINK-3/3C Premium, PROLINK-4/4C Premium, TV EXPLORER **II** / **II+**, TV EXPLORER **HD** / **HD LE** / **HD+** or **HD RANGER** / **+** spectrum analysers the drain indication on the analyser will confirm that the down converter is active.

On the spectrum analyser screen there will always be a frequency range which is actually 1000 MHz above the tuned frequency.



PROMAX ELECTRONICA, S. L.

Francesc Moragas, 71-75
08907 L'HOSPITALET (Barcelona)
SPAIN

Tel.: 93 184 77 00 * Tel. Intl.: (+34) 93 184 77 02
Fax: 93 338 11 26 * Fax. Intl: (+34) 93 338 11 26
<http://www.promaxelectronics.com>
e-mail : promax@promaxelectronics.com