

## GASMASTER HANDHELD GAS MONITORS 2700 SERIES

# CO, CO2, Ammonia, Formaldehyde, Ozone, VOC and over 20 other gases

Handheld gas monitors are suitable for indoor, industrial and outdoor air quality monitoring. Compatible with over 20 different interchangeable sensor heads, one monitor can be used to measure multiple gases and concentrations. Interchangeable sensor heads also make servicing the monitors as simple as replacing the old head with a new one.

## Applications

- ♦ IAQ investigations
- Environmental monitoring
- ♦ Industrial processing
- Food and pharmaceutical
- ✤ Green building/LEED certification




- Simultaneous measurements of gas concentration, temperature and humidity.
- Model 2710 is a simple and easy-to-use low-cost monitor.
- Model 2750 has data logging function and USB interface for PC communication.
- Multi-gas sensor heads are available for IAQ survey applications.
- Over 8 hours of battery life (recharges in 2 hrs).
- ♦ Span and zero calibration.
- ♦ The gas monitor is fully compatible with all gas sensors.
- Sensor heads for handheld units are interchangeable without recalibration of main unit.
- More than 20 detectable gases including: ammonia, carbon monoxide, carbon dioxide, hydrogen, formaldehyde, hydrogen sulphide, methane, ozone, nitrogen dioxide, perchloroethylene, sulphur dioxide and VOCs



### HANDHELD GAS MONITOR SPECIFICATIONS

\*Specifications are subject to change without notice..

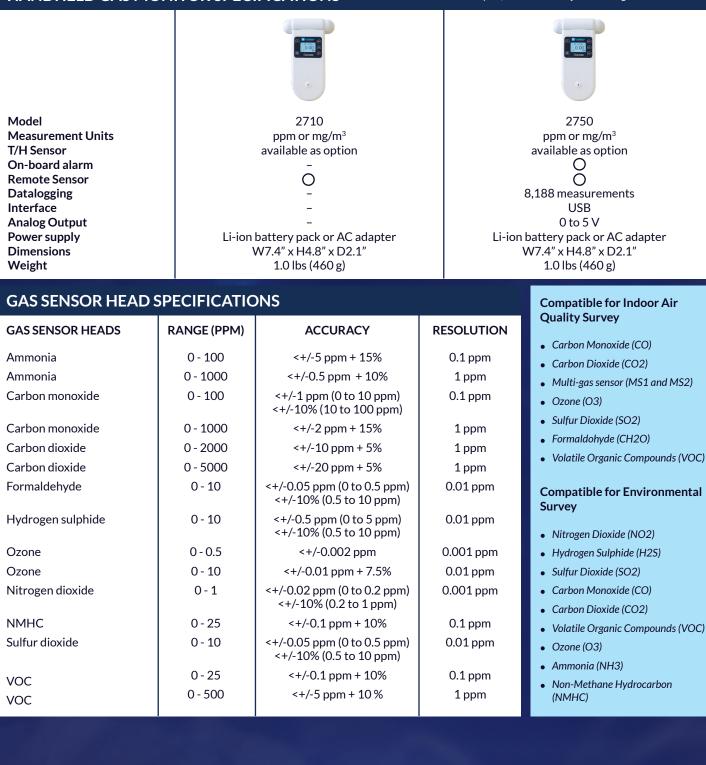

KANOMAX USA, INC. 219 US HWY 206 ANDOVER, NJ 07821 USA TEL: 973-786-6386 FAX: 973-786-7586 E-MAIL: SALES@KANOMAX-USA.COM

**URL: WWW.KANOMAX-USA.COM** 

#### **DISTRIBUTED BY:**