

RT-8X 延伸系列電阻切彎腳成型機 – 可依產能需求擴充設備功能

RT-8X Series, Taped Axial Lead Bending Machines (U Shape) – Upgrade upon productivity - Axial lead benders with rotary disc cutters offer no-tools-required setups and changeovers

高級模具從單一到自動化，針對散裝及帶式零件，可依需要而有不同的選擇性配備供客戶選擇。機身結構強固，配合壽命長的滾輪式切刀，提高操作簡易的加工設備。維修簡便，操作時不需特別的額外工具，以達到方便性。

Changeovers and setups are simple and fast. Thank to no tooling required pitch and lead length adjustments. RT-8X series of axial lead formers do not score or damage component leads, nor do they place mechanical stress or axial tension on the components.

- 獨立的滾輪切刀壽命長
- 機體輕巧，操作方便，可依需求擴充功能
- 加工成型不傷害零件本體

依需求功能 本機型包括：

- 標準型
- 專用型 (S)
- 加強型 (W)
- 直立型 (F)
- 切直線 (L)

- Heavy duty construction, full adjustable for lead spacing, lead length, part diameter, and shoulder length.
- Independent rotary disc cutters for longer cutting life.
- Won't score or damage leads or components.

Different Models


- Standard
- (S) Slim lead- for smaller parts.
- (W) Heavy duty- for thicker wire diameter.
- (F) Vertical bending- for stand-up mount.
- (L) Linear- Trim off leads at both sides.

RT-80 手搖帶式電阻成型機

Hand-crank Taped Axial Lead Bender

尺寸 Dimensions:
380L x 180W x 210H mm
淨重 Weight: 8Kgs
加工量 Production rates:
Taped 50,000 pcs/hr

RT-80

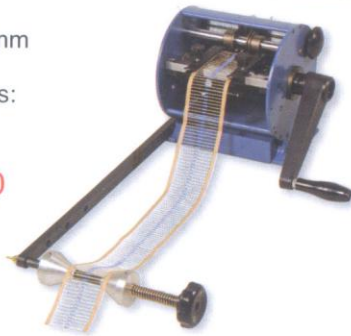

RT-82 帶式電阻成型機

Motorized Taped Axial Lead Bender

電壓 Power: 110V/220V AC.60/50Hz
尺寸 Dimensions: 470L x 180W x 235H mm
淨重 Weight: 15Kgs
加工量 Production rates:
Taped 60,000 pcs/hr

RT-82




RT-86 散裝及帶式電阻成型機

Motorized Taped and Loose Axial Lead Bender

電壓 Power: 110V/220V AC.60/50Hz
尺寸 Dimensions: 470L x 500W x 235H mm
淨重 Weight: 28Kgs
加工量 Production rates:
Taped 43,000 pcs/hr,
loose 7,200 pcs/hr

RT-86


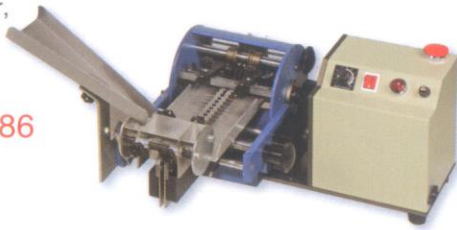


RT-90 電阻成型機

Motorized Taped and Loose Axial Lead Bender with Bowl Feeder

電壓 Power: 110V/220V AC.60/50Hz
尺寸 Dimension: 600(L) x 590(W) x 440(H)
淨重 Weight: 60kgs
加工量 Production rates:
Taped 43,000 pcs/hr,
loose 9,000 pcs/hr

RT-90

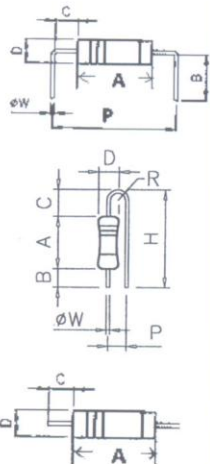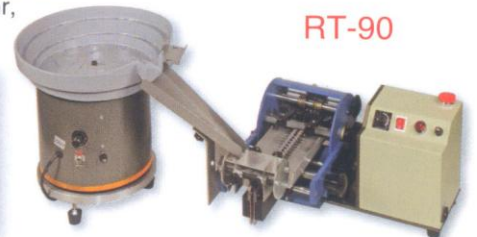

型式	Type	型號 Model				
手動	Manual	RT-80	RT-80S	-----	RT-80F	RT-80L
自動	Motorized	RT-82	RT-82S	RT-82W	RT-82F	RT-82L
入料器 + Hopper		RT-86	RT-86S	RT-86W	RT-86F	RT-86L
震動盤 + Bowl		RT-90	RT-90S	RT-90W	RT-90F	RT-90L
A- 本體長	Body Length	3.5 - 37.6	3.5 - 37.6	3.5 - 37.6	3.6-18	3.5 - 37.6
B- 腳長	Lead Length	3.5-10	3.5-10	3.5-10	2-12	
C- 肩寬	Shoulder	1.2 (Min)	0.6 (Min)	1.2 (Min)	3.5 (Min)	3 (Min)
W- 線徑	Wire diameter	Ø0.35 - Ø0.8	Ø0.35 - Ø0.8	Ø0.35 - Ø1.5	Ø0.35 - Ø0.8	Ø0.35 - Ø1
D- 本體直徑	Body Diameter	1.5 - 8	1.5 - 8	1.5 - 8	1.5 - 6	1.5 - 8
P- 腳距	Pitch	6-40	5-40	6-40	2.5-13.5	
H- 支腳長	Support lead				25 Max	
R- R角	R Angle		(mm)		1-3	