



## [AR Series] Pneumatic Lead Forming Tool

- 電晶體、功率晶體、電容、電阻、已彎腳電阻等各種零件線腳均可加工成型，可配合多種型式模具。 Most kinds of components are available, die is customized.
- 成型切腳一次完成方便作業。 Single strike to form and cut.
- 體積小，模具更換容易。 Small and compact, change dies easily.
- 本機型配備一組訂製模具，模具成型規格依客戶需求製作。若需兩組以上，則可另購模具更換使用。 Die is customized upon forming spec., more spec. for more dies.
- 歡迎直接來圖面，我司立即提供解決方案! Provide you suitable solution upon the forming drawing with spec.


### **AR-108 氣動式零件引腳成型機 - 單氣缸 Air Drive Lead Forming Machine - Single Cylinder**

尺寸 Dimension: 420(L) x 300(W) x 200(H) mm

淨重 Net weight: 8 kgs


毛重 Shipping weight: 9 kgs

氣壓 Air Source: 5kgs/cm<sup>2</sup>

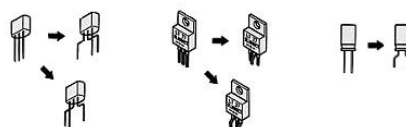

#### **Features:**

- 單氣缸提供單向成型力道。 Single forming direction.

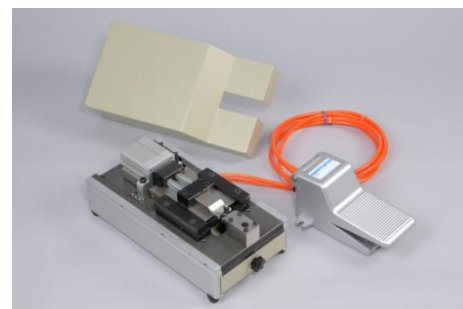

### **AR-106 氣動式零件引腳成型機 - 雙氣缸 Air Drive Lead Forming Machine - Twin Cylinder**

尺寸 Dimension: 420(L) x 300 (W)x 200(H) mm

淨重 Net weight: 10 kgs



毛重 Shipping weight: 12 kgs

氣壓 Air Source: 5kgs/cm<sup>2</sup>

腳距範圍 Available Pitch: 7~20mm

#### **Features:**

- 雙氣缸從左右雙面成型。
- 梯形底座，適用騎放不同腳距 Pitch 零件。
- Trapezoid die base is available for different pitches.
- Twin cylinders form and cut from both sides.

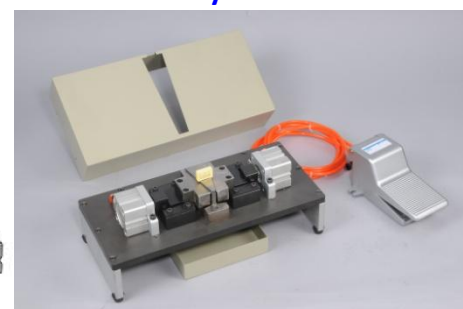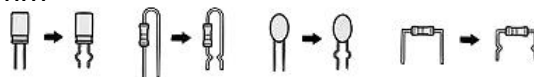

### **AR-110 氣動式零件引腳裁斷機 - 單氣缸 Air Drive Lead Forming Machine - Single Cylinder**

尺寸 Dimension: 280(L) x 150 (W) x 130(H) mm

淨重 Net weight : 8kgs

毛重 Shipping weight: 12 kgs

氣壓 Air Source : 5kgs/c m<sup>2</sup>

腳長 After-Cut lead length: 0.4~6.5mm, customized available.

- 本機採用氣壓帶動切刀。
- 切腳板上預留各樣孔位，適合各樣奇型怪狀零件之切腳。
- 可更換切腳板配合各種特殊異型零件。
- 切斷後腳長固定，請訂購時指明。
- After-cut lead length is fixed, please, advice upon order.
- Cutting plate can be tailored for odd parts.
- Air Drive cutter
- Diverse holes on cutting plates for different part leads.

