



**Mastercool**<sup>®</sup> Inc.  
"World Class Quality"

1 ASPEN DRIVE, RANDOLPH, NJ 07869  
PHONE: 973-252-9119 / FAX: 973-252-2455  
WEB: WWW.MASTERCOOL.COM

## HYDRA-KRIMP *FABRICATING A/C HOSES JUST GOT EASIER...*




### SPECIFICATIONS:

Part#	Description
71500 - 001AB	Hydra - Krimp Pump
71500 - 001B	Hydra - Krimp Yoke
71500-001C	Complete Die Set Assembly (7 pc. set)
71500 - 6	Die Set - #6 (5/16") Die Set - #8 (13/32") Reduced Barrier
71500 - 8	Die Set - #8 (13/32")
71500 - 10	Die Set - #10 (1/2")
71500 - 12	Die Set - #12 (5/8")
71500 - 6SRB	Die Set - #6 (5/16") Reduced Barrier
71500 - 10SRB	Die Set - #10 (1/2") Reduced Barrier
71500 - 12SRB	Die Set - #12 (5/8") Reduced Barrier
71500 - PB	Custom Molded Box



Easy to use hydraulic hand-held pump crimps the hose fitting in under 10 pumps.

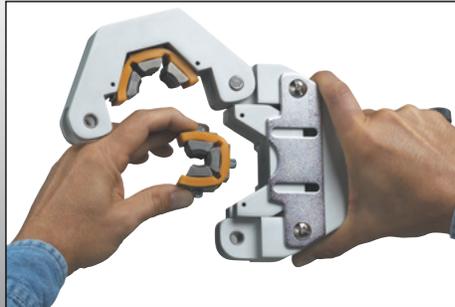

The die snaps quickly into the press fixture requiring no pins or screws.

### 71500-A HYDRA-KRIMP

Mastercool's patented "Hydra - Krimp" makes crimping barbed and beaded fittings as easy as 1 - 2 - 3!

The lightweight hand-held hydraulic press is very portable and ideal for shop and field applications. The kit comes with a complete set of dies covering hose sizes #6, #8, #10, #12 and reduced barrier #6, #8, #10 and #12. The dies snap quickly into the press fixture requiring no pins or screws. Kit comes in a custom molded case.

- ACCEPT NO IMITATIONS, Mastercool's US designed A/C crimper has been the standard for over 25 years
- IDEAL FOR SHOP AND FIELD APPLICATIONS, the mobility of the 71500 allows the technician to work directly to repair or fabricate a/c hoses on the vehicle
- HYDRAULIC BODY CREATES OVER 10,000 PSI OF PRESSURE allowing technicians to recrimp existing hose assemblies that might have a leak
- MASTERCOOL'S DIES ALLOW FOR AN OE DESIGN 6 SEGMENTED CRIMP to ensure no leaks
- EASY TO USE HYDRAULIC HAND-HELD PUMP crimps the hose fitting in under 10 pumps

