

Power Thin Blade Cutting Pliers

225mm PW-305DG ECCENTRICCRIMPING






- Cutting 3 core flat cable (VVF cable) easily and cleanly.
- Eccentric structure reduces the load required for cutting.
- Comfortable elastomeric double molded resin grips.
- Improved handle shape.
- Crimping die loaded. *This is not an exclusive crimping tool.

Specifications

- Material | Alloy steel
- Heat Treatment | Induction hardening on edge
- Edge hardness [HRC] | $58 \sim 64$
- Handle cover | Elastomeric double molded resin grips

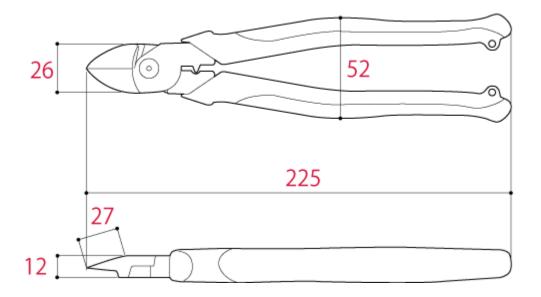

	Size[mm]						EAN-code
	Overall length	Head width	Head thickness	Handle width	Edge length	Weight [g]	(4952269)
PW-305DG	225	26	12	52	27	340	113105

Cutting capacity (φmm)	VVF cable	Soft iron	Copper	Stranded copper wire [mm ²]
PW-305DG	2.6x3cores	2.0	3.2	8.0

Note: Do not use to cut harder wire or anything above it rated the capacity.