



## Power Thin Blade Cutting Pliers

160mm PW-332DG / 200mm PW-334DG ECCENTRIC




- Cutting 3 core flat cable (VVF cable) easily and cleanly.
- Eccentric structure reduces the load required for cutting.
- Comfortable elastomeric double molded resin grips.

### Specifications

- Material | Alloy steel
- Heat Treatment | Induction hardening on edge
- Edge hardness [HRC] | 58~64
- Handle cover | Elastomeric double molded resin grips

PW-332DG

PW-334DG

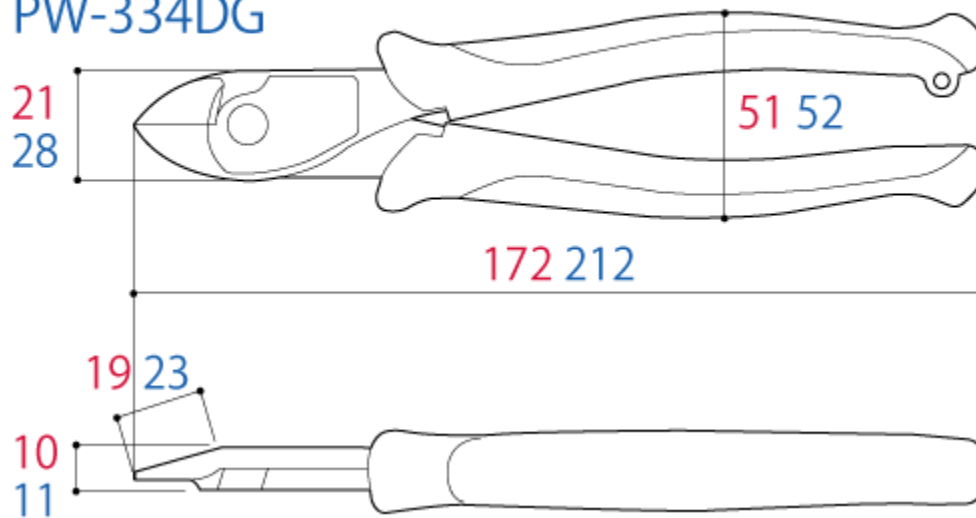

|          | Size[mm]          |               |                   |                 |                | Weight<br>[g] | EAN-code<br>(4952269) |
|----------|-------------------|---------------|-------------------|-----------------|----------------|---------------|-----------------------|
|          | Overall<br>length | Head<br>width | Head<br>thickness | Handle<br>width | Edge<br>length |               |                       |
| PW-332DG | 172               | 21            | 10                | 51              | 19             | 180           | 113303                |
| PW-334DG | 212               | 28            | 11                | 52              | 23             | 290           | 113310                |

| Cutting capacity<br>(φmm) | VVF cable  | Soft iron | Brass | Copper | Stranded copper wire [mm <sup>2</sup> ] |
|---------------------------|------------|-----------|-------|--------|-----------------------------------------|
| PW-332DG                  | 1.6x3cores | 2.0       | 2.6   | 3.2    | 8.0                                     |
| PW-334DG                  | 2.0x3cores | 2.6       | 3.0   | 4.0    | 8.0                                     |

Note: Do not use to cut harder wire or anything above it rated the capacity.