



## Bent Nose Pliers

150mm TM-05 SpringBOX JOINT




- Bent type nose is suitable for works on the desk.

---

## Features of Trinity series products

# Trinity

**Long-life & high durability**  
**Box joint structure**

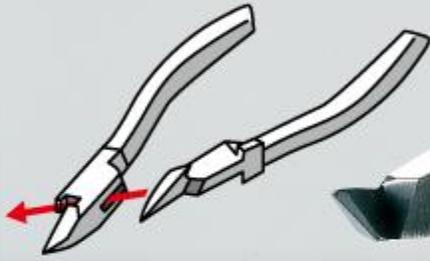


**Adjustable & durable**  
**Leaf springs**

Even if jaw opened fully, leaf spring does not broken like a coil type spring. Also the resilience can be adjusted to your preference.

**Double molded**  
**Elastomer resin cover**

Originally developed cover shape fits the hand and reduce fatigue of works. Using Eco-friendly burnable material.

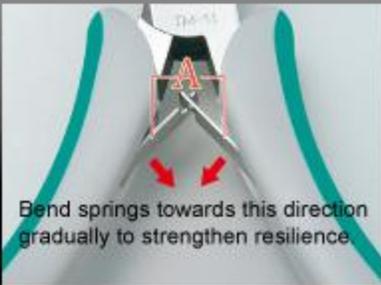

## **Box joint**

Long-life stability, none-backlash.

## **Leaf springs**


Long-life and high durability. Adjustable resilience.

## **Comfortable elastomeric double molded resin grips**

Using eco-friendly elastomer resin which does not emit dioxin when it is burned. Original designed grip realized ideal weight balance and work efficiency improvement.

## **Specifications**

- Material | Alloy steel
- Heat Treatment | Induction hardening on edge
- Hardness | 54~62
- Spring | Leaf springs
- Handle cover | Elastomeric double molded resin grips

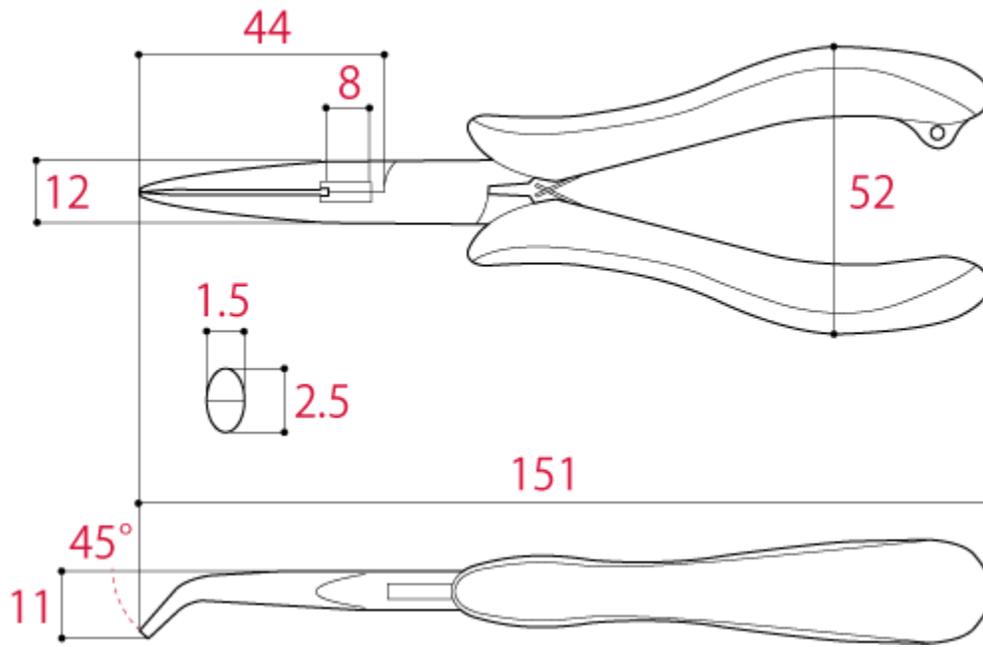

	Size[mm]								Weight [g]	EAN-code (4952269)
	Overall length	Head width	Head thickness	Handle width	Nose length	Edge length	Tip size	Nose angle		
TM-05	151	11	11	52	44	8	1.5x2.5	45°	75	110265

Cutting capacity (φmm)	Soft iron	Copper
TM-05	0.8	1.2

Note: Do not use to cut harder wire or anything above it rated the capacity.