



## Flat Nose Pliers

130mm TM-07 SpringBOX JOINT




- Smooth gripping surface type.
- For bending metal sheets or crimping crimp beads.

---

## Features of Trinity series products

# Trinity

**Long-life & high durability**  
**Box joint structure**

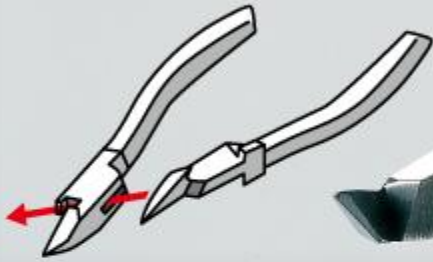

**Adjustable & durable**  
**Leaf springs**

Even if jaw opened fully, leaf spring does not broken like a coil type spring. Also the resilience can be adjusted to your preference.

**Double molded**  
**Elastomer resin cover**

Originally developed cover shape fits the hand and reduce fatigue of works. Using Eco-friendly burnable material.



Bend springs towards this direction gradually to strengthen resilience



Inside:  
Firm texture

Outside: \_\_\_\_\_  
Soft texture for hands

## **Box joint**

Long-life stability, none-backlash.

## **Leaf springs**


Long-life and high durability. Adjustable resilience.

## **Comfortable elastomeric double molded resin grips**

Using eco-friendly elastomer resin which does not emit dioxin when it is burned. Original designed grip realized ideal weight balance and work efficiency improvement.

## **Specifications**

- Material | Alloy steel
- Heat Treatment | Oxide-free heat treatment
- Hardness | 42~50
- Spring | Leaf springs
- Handle cover | Elastomeric double molded resin grips

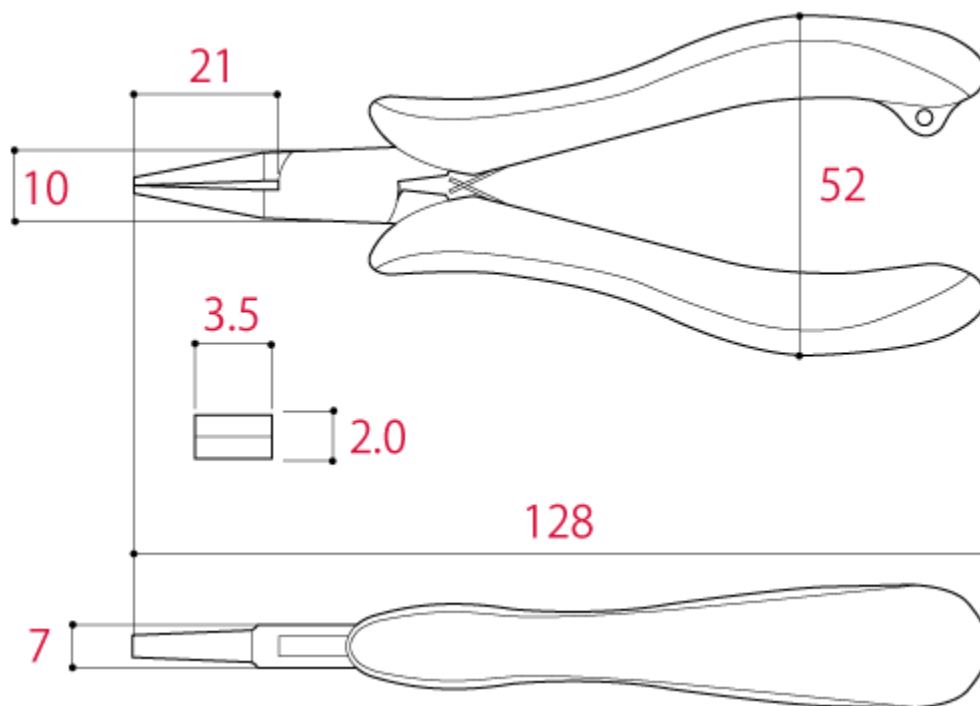

|       | Size[mm]          |               |                   |                 |                |             | Weight<br>[g] | EAN-code<br>(4952269) |
|-------|-------------------|---------------|-------------------|-----------------|----------------|-------------|---------------|-----------------------|
|       | Overall<br>length | Head<br>width | Head<br>thickness | Handle<br>width | Nose<br>length | Tip<br>size |               |                       |
| TM-07 | 128               | 10            | 7                 | 52              | 21             | 3.5x2.0     | 65            | 110289                |