

Automatic Stripper

TWS-B for Solid Wire (mm: 1.0/1.6/2.0/2.6/3.2) (AWG: 18/14/12/10/8) Spring new!





- Stripping with ease, just gripping once.
- Quick gauge helps continuous stripping with the same length.
- Recommendable both of beginner and professional.
- Type B is for Solid Wire (mm: 1.0/1.6/2.0/2.6/3.2) (AWG: 18/14/12/10/8)

[4 TYPE FOR STRIPPING VARIOUS CABLE]

- TWS-A -- Solid Wire : 0.5/1.2/1.6/2.0 (mm)
- TWS-B -- Solid Wire : 1.0/1.6/2.0/2.6/3.2 (mm)
- **TWS-C** -- IV Cable : 1.25/2.0/3.5/5.5/8.0


(mmsq)

TWS-D -- Stranded Wire : 0.9/1.25/2.0/3.5/5.5


(mmsq)



How to Use

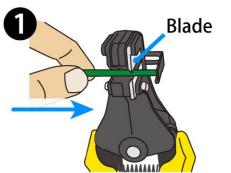


Insert wire into correspond hole on the blade.

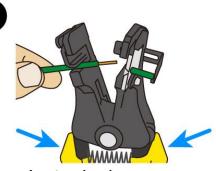


Just gripping once.



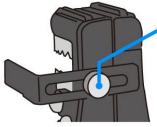

Quick gauge is adjustable by hand.

2

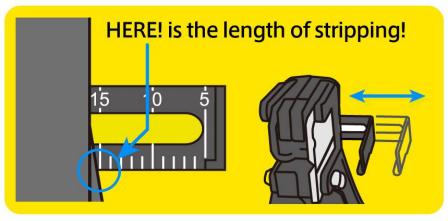

Quick gauge shows rough length of stripping. Please note it is not precise strictly.

Specifications

• Handle cover | Elastomeric molded resin grips

	Whole length (mm)	Weight (g)	EAN code
TWS-B	166	335	4952269 114638

Intended Use	Size (mm)	(AWG)
Solid Wire	1.0/1.6/2.0/2.6/3.2	18/14/12/10/8

Note: Do not use to strip wire other than listed above.