

750VA  
20-5,000 Hz

1Ø → 0-338V<sub>L-N</sub>  
2Ø → 0-600V<sub>L-L</sub>



## Standard Features:

- Advanced Linear Amplifiers Provide Very Low Voltage Distortion, no Switching Noise, Fast Voltage and Current Slew Rates, Exceptionally Low Output Impedance and High Peak Current Capability
- Single or Split phase selectable output from front panel or bus command
- 20 to 5,000 Hz. Full Power Bandwidth Operation – 5Hz to 50KHz small signal bandwidth, 3dB at 10% of full voltage
- Precision Voltage Programming – 0.05% with Continuous Self-Calibration (CSC) engaged
- True-RMS Metering of Volts, Amps, and Power
- GPIB (IEEE-488.2) or RS-232 Interface
- Waveform Library – Arbitrary Waveform Generator
- Up to 99 Programs with Associated Transients for Static and Dynamic Test Applications
- UPC Studio Software Suite

## Available Options:

- Programmable Output Impedance
- Harmonic Analysis and Waveform Synthesis
- Peak Inrush Capture and Waveform Analysis (Available on models with UPC3 controller)
- UPC Test Manager Software

## UPC Manager Software Suite

*Master the Power of the Wave!*

UPC Manager Software gives you the tools necessary to quickly and easily operate your AC Power Source. With our graphical interface control all areas of your AC Power Source testing with simple presets, user prompts, test sequences, test plans and custom reports.



## Model 108AMX

As a member of Pacific Power's AMX-Series popular family of high performance Linear AC Power Sources, the 108AMX offers the same low output voltage noise and distortion, ease of installation, and high AC waveform fidelity as found in all of Pacific Power's Linear AC Power Sources. Control and operational features provide a high degree of versatility and ease of use for applications ranging from simple, manually controlled frequency conversion to harmonic testing and sophisticated programmable transient simulation.

### AC TEST POWER

All 108AMX models are equipped with a powerful micro-controller with the ability to operate as a fully integrated test system. This enables a variety of power conditions and transients to be applied to the device under test while metering and analyzing all output performance parameters. For higher power requirements, refer to the AMX & ASX series catalog.

### FREQUENCY/VOLTAGE CONVERSION

The 108AMX is an excellent source of stable AC Voltage over the frequency range of 20 to 5,000 Hz when using the high-end UPC-12 controller. Also available in 1,200 Hz maximum output frequency when using UPC-1 or Manual controller. The output frequency is quartz-crystal stabilized. Output voltages up to 135V<sub>L-N</sub> in single phase mode and up to 270V<sub>L-L</sub> in split phase mode are available on the 108AMX model and up to 600V<sub>L-L</sub> in three phase mode on the 108AMXT model.

### PHASE CONVERSION


With the ability to provide two phase output, the 108AMX is a good choice to convert one-phase line voltage into precisely controlled split (two-phase) output power.

### UPC SERIES CONTROLLER

Three controller models are available in both manual and programmable control version. All controllers provide manual operation from the front panel. Programmable Controllers may be operated from the front panel or from a remote interface via RS 232 or GPIB.

## The Leader in AC Power Technology

An early pioneer in the development solid-state power conversion equipment, Pacific Power Source continues to develop, manufacture, and market both linear and high-performance PWM AC Power Sources. Pacific Power Source's reputation as a market and technology leader is best demonstrated by its continuing investments in both research and development and world-wide customer support. With corporate owned offices in the United States, Germany, the United Kingdom, and China, local personalized support is always available.

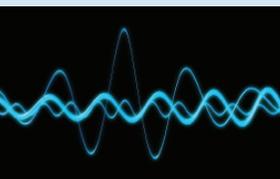

FREQUENCY CONVERSION



AEROSPACE



R & D



MILITARY



MANUFACTURING



CUSTOM

## Output Ratings

### 108AMX

Rated Power (VA) <sup>1</sup>	Coupling Mode	Form <sup>2</sup>	Output Voltage <sup>3</sup> V <sub>RMS</sub> Max (L-N/L-L)	Current <sup>4</sup> (A <sub>RMS</sub> )	Frequency Range	Input Power	Unit Height In/mm/U	Unit Weight (Lbs/Kg)
750	Direct	1Ø/2Ø	135/270	6/3	20-5000	1Ø 47-63Hz	5.25/133/3U	70/31.8

### 108AMXT

Rated Power (VA) <sup>1</sup>	Coupling Mode	Form <sup>2</sup>	Output Voltage <sup>3</sup> V <sub>RMS</sub> Max (L-N/L-L)	Current <sup>4</sup> (A <sub>RMS</sub> )	Frequency Range	Input Power	Unit Height In/mm/U	Unit Weight (Lbs/Kg)
750	Direct	1Ø/2Ø	135/270	6/3	20-5000	1Ø 47-63Hz	5.25/133/3U	97/44
	Transformer 1.5:1	1Ø/2Ø	202/404	4/2	45-5000			
	Transformer 2.0:1	1Ø/2Ø	270/540	3/1.5	45-5000			
	Transformer 2.5:1	1Ø/2Ø	338/600	2.4/1.2	45-5000			

- NOTES:
- Rated output power is based on a combination of nominal output voltage, rated current and load power factor. Values stated represent the maximum capabilities of a given model. Consult factory for assistance in determining specific unit capabilities as they might apply to your application.
  - Unit is operable as single phase with dual range capability. Output voltage range and 1/2 conversions are selected by front panel or bus commands.
  - Vmax is output voltage with nominal input and full rated load applied.
  - Available current will vary with output voltage and power factor. Current shown is per phase.

## AMX Power Source Specifications (PF = 1.0, V<sub>out</sub> > 25% F.S.)


Output Frequency	Line Regulation	Load Regulation	Output Distortion	Ripple and Noise	Response Time
Full Power 20-5,000 Hz Direct Coupled 45-5,000 Hz Transformer Coupled	0.1% max for a ±10% line change	Direct Coupled Ranges: 0.25% 20 to 2,000 Hz. 0.50% 2,000 to 5,000 Hz. Improves to less than 0.03% with external sense and CSC enabled. Transformer Coupled Ranges: 1.5:1 2% 2.0:1 4% 2.5:1 5% Improve to < 0.1% with external sense and CSC enabled.	0.1% THD <sub>AVG</sub> 45 to 1,000 Hz 0.25% THD <sub>AVG</sub> 20 to 5,000 Hz	-72dB	5 µsec typ. For step load change. Small signal bandwidth = 5 Hz to 40 KHz

## Input Power Requirements (47-63 Hz)

Input Voltage	110VAC ±10%	120VAC ±10%	220VAC ±10%	230VAC ±10%	240VAC ±10%
Input Current	14A <sub>RMS</sub>	13A <sub>RMS</sub>	7A <sub>RMS</sub>	7A <sub>RMS</sub>	6A <sub>RMS</sub>
Recommended Input service	25A	25A	15A	15A	15A


## Thermal and Power Factor Rating Curves

Rated Continuous Load Current as a Function of Ambient Temperature and Power Factor and Output Voltage at Nominal Input Line.

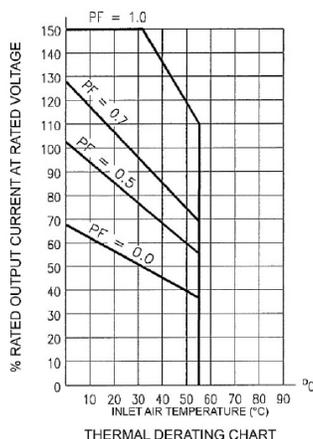

### THERMAL RATING -AC CURRENT RMS

Short term overloads to 150% of rated current are permitted. Operating time before thermal shutdown or circuit breaker trip varies from seconds to several minutes depending upon line and temperature conditions.

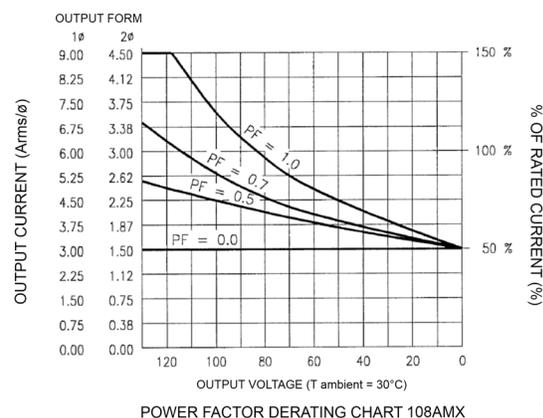

### OUTPUT VOLTAGE-AC VOLTS RMS


Short term overloads to 150% are permitted. Operating time before thermal shutdown or circuit breaker trip varies from seconds to several minutes depending upon line and temperature conditions.

## Total Control, Metering, and Analysis of AC Power- Simple, Intuitive Operation

The UPC Controller is a highly versatile one, two, or three phase oscillator/signal generator designed to control any of Pacific Power's AC Power Sources. Three controller models, UPC-1M, UPC-1, or UPC-12 are offered. To use the full 5KHz power bandwidth of the 108AMX, the UPC-12 controller is required.

Using the front panel keyboard and display, all controller models provide for selection of power source output mode, coupling, voltage, and frequency. Selecting the correct UPC controller for a given application varies with your test requirement, desired features, and price.

Both the UPC-1 and UPC-12 Controllers are available with either RS-232 or GPIB remote interface. Commands are structured in accordance with SCPI (Standard Commands for Programmable Instruments).

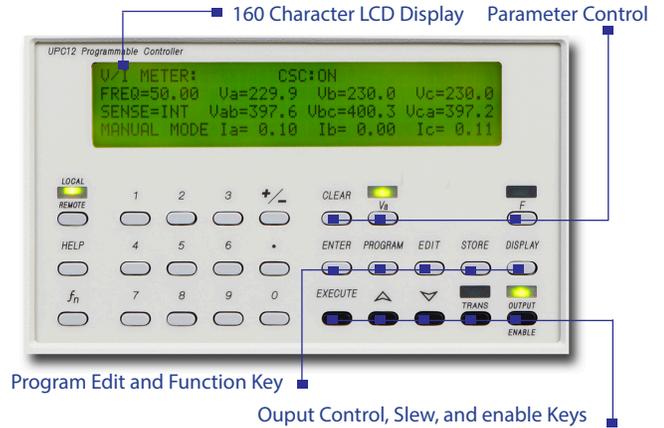

### Controller Models

Features	UPC-1M	UPC-1	UPC-12
Output Modes	1Ø & 2Ø	1Ø & 2Ø	1Ø, & 2Ø
Waveform Library	Sine	Sine + 21 Editable	Sine + 15 Editable
Transient Functions	NO	YES, 50 Steps	YES, 99 Steps
Program Library	NO	99 Programs	99 Programs
Programmable Current Limit	YES	YES	YES
Programmable Current Protect	YES	YES	YES
CSC (Continuous Self-Calibration)	YES	YES	YES
Remote Interface	Std	NONE	RS-232
	Opt	NONE	GPIB
Waveform Synthesis/Analysis	NO	OPTIONAL	OPTIONAL
Prog. Output Impedance	NO	OPTIONAL	OPTIONAL
Inrush Peak Detect	NO	OPTIONAL	NO
DRM Link-Synchronization	NO	NO	OPTIONAL
Line Synchronization	NO	NO	OPTIONAL

### External Inputs/Outputs

Analog Auxiliary Input	Each phase is algebraically summed with UPC waveform and amplified 25X to the direct coupled output. $\pm 10V_{pk}$ (20Vpk-pk). One input per phase. $Z_{in} = 600 \Omega$
AM-Amplitude Modulation	$\pm 10 V_{dc}$ (20Vpk-pk) modulates the output voltage $\pm 100\%$ . One input per phase. $Z_{in} = 600 \Omega$
Sync Outputs Zero Crossing	Positive Zero Crossing (0°) of Phase A analog output
Transient Trigger	Pulse at the start of a transient event. (UPC-32 only)
Transient Pedestal	TTL True when a transient is in progress
Output Clock	UPC-1, TTL level pulse rate varies with output frequency UPC-12, TTL level 1024 x output frequency

### Waveform Control

Waveform Synthesis (/HAS Option)	Creates waveform by entering magnitude as % of fundamental and specified phase angle for 2nd through the 51st harmonic
Waveform Analysis (/HAS Option)	Reports waveform harmonic content and phase angle relative to the fundamental for the 2nd through the 51st harmonic as Total, Odd, and Even harmonic distortion


### Output Control Specifications

	UPC-1M/UPC-1	UPC-12
Frequency	Range	20-1,200Hz
	Resolution	4 Significant Digits
	Accuracy	$\pm 0.01\%$ of full scale
Voltage	Range (I-n)	0 - 150/375
	Resolution	0.1V/ 0.5V
	Accuracy	0.5% of full scale (CSC Disabled) $\pm 0.05\%$ referenced to Internal Meter (CSC Enabled)
Phase Angle ØB and ØC relative to ØA	Range	0 - 359°
	Resolution	$\pm 1^\circ$
	Accuracy	15.00 - 150Hz, $\pm 0.5^\circ$ 15.00 - 300 Hz, $\pm 1^\circ$ 15.00 - 600 Hz, $\pm 2^\circ$ 15.00 - 1,200Hz, $\pm 3^\circ$
	Accuracy	$\pm 0.5^\circ$
Current Limit	Range	1Ø = 0 - 60A <sub>RMS</sub> 2Ø = 0 - 20A <sub>RMS</sub>
	Resolution	0.05% F.S.
	Accuracy	$\pm 3\%$ F.S. $\pm 1\%$ F.S.

(1) Full power output limited to 1=5,000 Hz in AMX models

### Output Metering

	UPC-1M/UPC-1	UPC-12
Voltmeter True V <sub>RMS</sub> each phase	Range	0-354 V <sub>L-N</sub> 708V <sub>L-L</sub>
	Resolution	0.1V front panel
	Accuracy	$\pm 0.2\%$ F.S. plus Cal ref.      50-500Hz, $\pm 0.25\%$ of rdg. $\pm 0.1\%$ F.S. 20-5,000 Hz, $\pm 0.5\%$ F.S.
Ammeter True A <sub>RMS</sub> and Apk each phase	Range	1Ø = 60A <sub>RMS</sub> , 2Ø = 20A <sub>RMS</sub>
	Resolution	0.01A front panel
	Accuracy	$\pm 0.2\%$ F.S. plus Cal ref. $\pm 0.25\%$ of rdg. 50-500Hz, $\pm 0.1\%$ F.S. 20-5,000 Hz, $\pm 0.5\%$ F.S.
Power Meter True Watts and Volt-Amps each phase	Range	1Ø = 21,240/Ø (W or VA), 2Ø = 7,080/Ø (W or VA)
	Resolution	1.0 Watt or VA front panel
	Accuracy	$\pm 1\%$ full range
Power Factor Ratio: kW <sub>mtr</sub> /kVA <sub>mtr</sub>	Resolution	Calculated and displayed to three digits following the decimal point.
	Accuracy	$\pm 1\%$ full range
Crest Factor Ratio: Apk/A <sub>RMS</sub>	Resolution	Calculated and displayed to three digits following the decimal point.
	Accuracy	$\pm 1\%$ full range
Freq. Display	Range	15.00 - 1,200 Hz      20.00-5,000Hz
	Resolution	10.00-99.99 Hz, 0.01 Hz 100.0-999.9 Hz, 0.1 Hz 1,000-5,000 Hz, 1 Hz
	Accuracy	$\pm 0.01\%$ full range
	Accuracy	$\pm 0.01\%$ full range

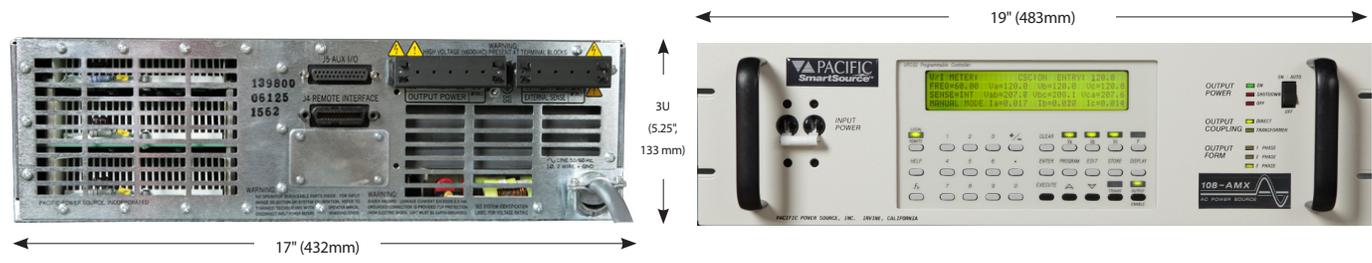

### General/Environmental

Temperature	Operating: 0° to 55° C Storage: -10° to 70° C
Humidity	0 - 95%, Non-condensing
Cooling	Front and side forced air intake (100 CFM) with rear exhaust.
Altitude	Operating: 6,500 Ft (1,981m) Storage: 40,000 Ft (12,192 m)
Heat Dissipation	800BTU/ hr (Full kW Load)
Audible Noise	65 dba Max @ 1 Meter
Agency Approvals	Safety UL 61010 -1 EN 61010 -1 EMC EN 61326 -1

### Mechanical Specifications

Height	108AMX: 3U (5.25", 133mm)
Depth	108AMX: 23" (584mm) (Approx. from front panel to the rear of chassis.)
Weight	108AMX: 70 lbs (31.8kg) 108AMXT: 97 lbs (44kg)
Mounting	Standard 19" rack (483mm). Cabinet options available.

### Hardware Options

/S	RS232 Interface. 38.4kbps, (Standard on UPC-3)
/G	GPIO Interface, IEEE-488.2. (Standard on UPC-32)
/M7073	Safety Interlock Normally Open Contacts
/M99413	Safety Interlock Normally Closed Contacts
/MXXXX	Other factory specified modification

### Protection and Safety

Hardware	Over-current, short circuit, over-temperature
Programmable Current Limit	A single RMS programmed, average responding, value is provided for all phases. Limits current by reducing output voltage.
Programmable Current Protect	Allows the power source to operate in "constant voltage" mode, interrupting output when specified current protect limit is exceeded.

### Software/Firmware Options

/Prog-Z	Programmable Output Impedance
/HAS	Harmonic Analysis and Synthesis
/IR	In-Rush Meter. Capture and view peak in-rush current values via front panel or remote interface (UPC-1 only).
Test MGR	UPC Test Manager License: Create, edit, and execute Test sequences and reports. Ordered as separate line item
Test SEQ	Avionics test sequences; DO-160, ABD-0100, ABD-0100 (A350), Ordered as separate line item, Requires 'Test' Manager License.

### Ordering Information

Model	Controller	Options	T-Ratio (108AMXT Only)	Input Voltage ( $V_{IN}$ )
<input type="checkbox"/> 108AMX	<input type="checkbox"/> UPC-1M	See List Above	<input type="checkbox"/> Ratio 1.5:1	<input type="checkbox"/> 110VAC ± 10%
<input type="checkbox"/> 108AMXT	<input type="checkbox"/> UPC-1		<input type="checkbox"/> Ratio 2.0:1	<input type="checkbox"/> 120VAC ± 10%
	<input type="checkbox"/> UPC-12		<input type="checkbox"/> Ratio 2.5:1	<input type="checkbox"/> 220VAC ± 10%
				<input type="checkbox"/> 230VAC ± 10%
				<input type="checkbox"/> 240VAC ± 10%

### Available Models

#### With Manual Controller

108AMX-UPC1M  
108AMXT-UPC1M

#### With Programmable Controller

108AMX-UPC1      108AMXT-UPC1  
108AMX-UPC12    108AMXT-UPC12

### Order Example

108AMXT-UPC12, T= 2.0:1,  $V_{IN}$ : 120VAC

- 750VA, 1-Phase, AC Power Source with optional transformer and UPC-12 programmable controller.
- Standard GPIB Interface
- 2.0:1 Transformer Ratio
- 120VAC, 1 Phase Input Voltage

### Typical Delivery Items

- AC Power Source
- English Manuals (AC Source and Controller)
- UPC Studio Software - (Download)
- UPC Interactive LabVIEW™ Libraries (Download)
- Compliance Certificate with Test data
- CE Conformity Document (CE Models)



17692 Fitch, Irvine, CA 92614 USA  
Phone: +1 949.251.1800  
Fax: +1 949.756.0756  
Toll Free: 800.854.2433  
E-mail: sales@pacificpower.com  
www.pacificpower.com