


Single Wing Carton Drop Test Equipment Package Carton Box Drop Impact

Testing Machine





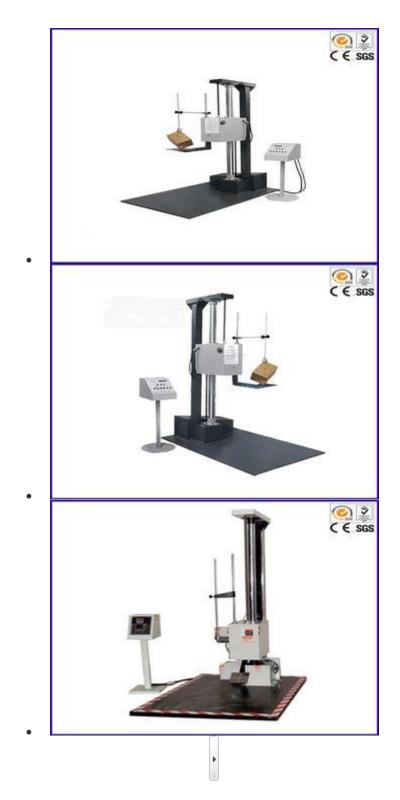

Product Details:

Place of Origin: China

Brand Name: YUYANG

Certification: ISO 22488

Model Number: YY1403

Payment & Shipping Terms:

Minimum Order Quantity: 1 set

• Price: Negotiation

Packaging Details: Plywood Case

• Delivery Time: 15-20 work days

Payment Terms: T/T L/C Western Union

• Supply Ability: 2 sets per month

Share to :

Single Wing Carton Drop Tester Package Carton Box Drop Impact Testing Equipment

Description:

This tester can determine the ultimate dimension in drop testing and incline impact testing for product and package performance which uses as reference to improve the packing. Special fixtures are available to allow for corner and edge drops.

Specifications:

Drop Height	300 - 1500mm
Max Weight of Specimen	65 kg
Test space	800×800×800
Impact board dimensions(mm)	1400×1200
Corbel dimensions(mm)	700×350
Motor	Highten 1/3P,manual wide adjustment
Overall dimensions(mm)	1400×1200×2200
Net weight(kg)	500
Power	380V 50HZ 5A
Meet the standard	ISO22488-1972(E)
Manner of execution	Motor-driven drop, hand reset

Theory:

This machine simulates the freedom drop movement from different heights.

Standard:

Design standards:GB4757.5-84 JISZ0202-87 ISO2248-1972(E)

Feature:

- 1. The main axle of tester used dual axle rode, high precision and good stability. Power failure safety design, it will be kept the original condition under power cut and the swing arm will not break away unusually.
- 2. The tester has set limits upward and down, will not exceed safety range when testing.
- 3. Support arm with electronic reset capability, can avoid the accident by manual operation.
- 4. Multi-functional sample supporter: Can rapidly fix the different size package to test the package edges, sides and corners.
- 5. Micro adjusting control, can rapidly set to the needed testing height.

